

Peel TM

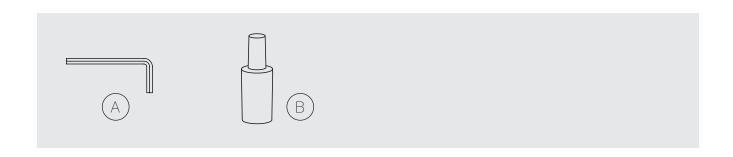

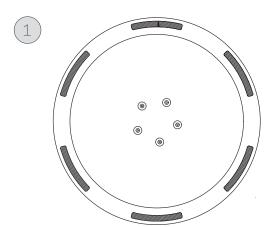



Wood Base:

Place the floor protection on wood prio to assembling the chair and base. Do not use on carpet!

Place the floor protection 1 cm from the edge.

Avoid placing the chair base on its edge during assembly or moving!

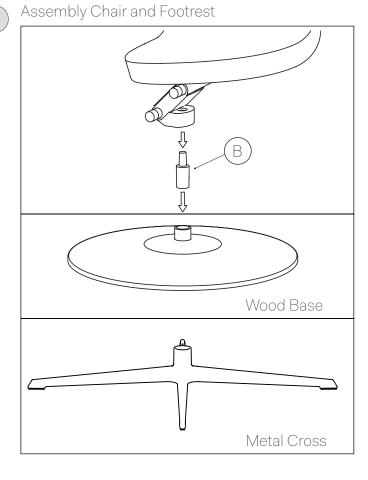

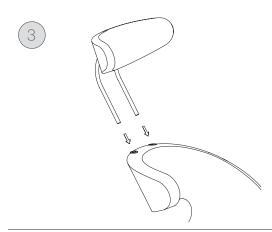



Balance Adjustment

